

# Cannon Photo Printer MS-P



This is a high resolution (1,200 dpi) printer using photo inks. It is made to print photos and does a really good job. NOT for regular printing on regular paper.

\$4 per printed sheet using your paper or the space paper. Not all kinds and sizes of paper will be available at all times. We have what we have. If you need a specific paper, you will need to bring it.

You can turn on the computer with the button at the top left of the computer box. The lower button on the right side of the smaller monitor will turn it on. The big TV you can turn on with the remote. The display should be on HDMI 3, but it can move around depending on which socket on the TV it is plugged in to. You may have to surf the input sources to find the computer display.


Turn the printer on by pressing and releasing the power button (the top one) on the printer.



Tilt up the Rear Paper Tray. Leave it in the up position.



Lift up the Internal Flap.

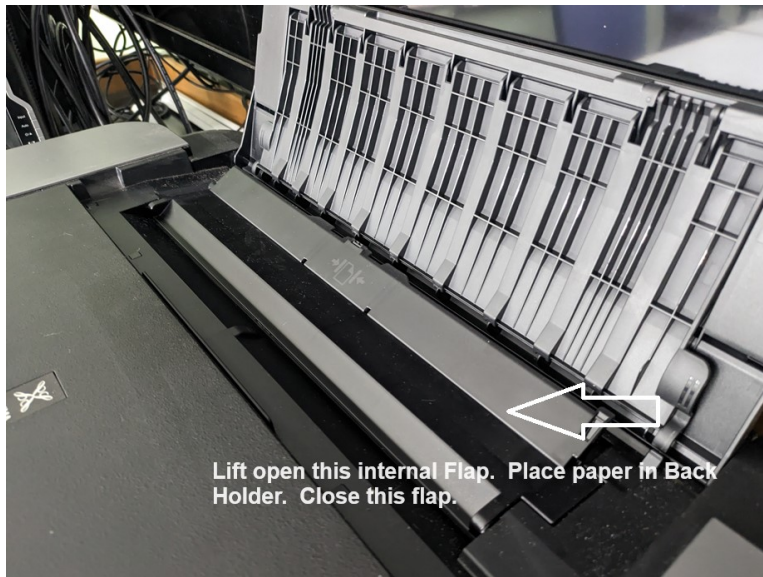

Place your sheet of paper, sliding it down the Rear Paper Tray until it stops.

Adjust the two side paper guides to the width of your paper.

Fold the Internal Flap back down.

Fold down the Output Tray on the front of the printer.



You are now ready to print.

Load your file on the computer and print as normal.

There are some notification windows that may open showing ink quantities and print progress.

When done;  
Close all of the paper trays.  
Press and release the Power Button.  
Shut down the computer.

Out of Ink.

Probably best left to a Steward, but.....

Press and release the Ink Button Twice. (located below the power button)

Lift the front cover.

The Ink Cartridges should move to the center of the opening (it make take a moment).

The empty ink cartridge(s) will be indicated by a flashing red LED.

There is a clip on the front of the ink cartridge.

Press it in and remove the cartridge.

Replace with the correct color. (Note, there is an orange cartridge protector that must be removed.) Place the cartridge in the slot and press down.

Close the front cover.

Stewards for this machine are Dave Painter and Jim Waldron.