





Explore

Shop

Support



Support Home

Droducti

Software and Drivers

Diagnostic Tools 🗸

Contact Support

Business Support

ort 💉

PRODUCT HOME

HP Designjets - Change Print Settings (Windows 10)

This document is for HP Designjets in Windows 10

This document describes how to change the print settings for single print jobs, how to change the default print settings, and explains the print settings options available in the Windows 10 Print Driver.

This video shows how to change print settings in Windows 10



VIDEO

Changing Print Settings in Windows 10

Learn how to change print settings for individual print jobs and default settings for all print jobs in Windows 10.

Click here to see this video in full screen on YouTube. ∠

Change the print settings for a single print job

If you're printing a single document from any program on Windows 10, and want to change the print settings, use the following steps.

1. Open the document that you want to print. Click File, and then click Print.

The **Print** window opens.

- Click the option that opens the Properties dialog box. Depending on the software program, the button might be Properties, Options, Printer setup, Printer, or Preferences.
- 3. Select the print settings for the current print job, and then click **OK**.

See the below sections to change the paper size and orientation settings.

×

Change the paper size

- 1. In the Driver settings, click the **Paper/Quality** tab in the printer driver properties window.
- 2. Click the **Advanced** tab.
- 3. Under the Paper Size heading, click the arrow (v) to open the drop-down menu, and then select a standard paper size or any custom created paper size.

- 4. To create a new Custom Paper Size, click Custom and define the unit, size, name, and then click Save.
- 5. Click OK.
- Change the print orientation
 - 1. In the Driver settings, click the Layout tab (in some Designjet printer models, the Layout tab will be available under Finishing or Paper/Quality).
 - 2. Under the **Orientation** heading, select **Portrait** or **Landscape**.
 - 3. Click OK.

Change the printed text size

Printed text size cannot be changed in the general Windows 10 print settings. For instructions on how to change the text size in a specific program, see that program's help guide.

Change the default print settings for all print jobs

If you want to change the settings for every print job, use the following steps.

- 1. Search Windows for devices, and click **Devices and Printers** in the list of results.
- 2. Right-click the printer icon () for your printer, and then select **Printing preferences**.
- 3. Select your new default print settings (paper size, orientation, etc.), and then click **OK**.

Understanding print settings

Use the following guide to help you understand the print settings.

NOTE: The names of the tabs and settings might be different, depending on your printer model and driver versions some of the features may not be applicable.

Settings on the Features or Layout or color tab of the Printing Preferences screen

Setting	Description
Print quality	Best produces the best print quality at the slowest printing speed. Normal increases the print speed and decreases the print quality. Fast produces draft quality at the fastest printing speed. Print quality can be selected from standard options by sliding between Speed and Quality . Optionally it can be changed by going into Custom Options and Settings .
Paper type	Automatic is the default setting. It enables the printer to automatically select the paper type. You can also select a paper type from the drop-down list.
Document size	Select the paper size from the drop-down list. Click Custom to create and modify custom paper size information.

Setting	Description				
	• Standard:				
	The printable area is equal to the selected paper size minus the selected margins.				
	The printer will add the selected margins to the printable area and align the resulting paper to the edge of the				
	loaded paper.				
	The printer will cut the paper to a size equal to the selected paper size.				
	• Oversize:				
	The printable area is equal to the selected paper size.				
Margins	The printer will add its margins to the printable area and align the resulting paper to the edge of the loaded				
	paper.				
	The printer will cut the paper with a size equal to the selected paper size plus the printer margins.				
	Clip Contents by Margins:				
	The printable area is equal to the selected paper size.				
	The printer will align the selected paper size to the edge of the loaded paper, and then clip the contents				
	according to the selected margins. Printer will not print any data inside the clipped area.				
	The printer will cut a paper with a size equal to the selected paper size.				
Pages per sheet	Select the number of pages to print on each sheet of paper.				
Disable Automatic	Select to turn off the automatic cutter so that the printer will not cut the page at the end of the print job.				
Cutter	select to turn on the automatic cutter so that the printer will not cut the page at the end of the print job.				
Remove Blank					
Area or Remove	Select to use only the roll paper that is necessary to print the image, which saves paper. If you select this option, the printer				
Top/Bottom blank	will not print the blank areas of the image. In other printer models this option is called 'Inked area'				
area					
Crop Lines	Select to include crop lines on the printed page.				
Remove Margins between pages	If this feature is enabled, multi-page printing jobs will be printed without top or bottom margins, creating one continuous image.				
Autorotate	Select this feature to permit the image or document to be automatically rotated in order to save paper or avoid clipping.				
	Specifies the order in which the pages of your document are printed.				
Page order	First page on top: Prints the document so that page 1 is on top of the stack.				
	Last page on top: Prints the document so that page 1 is on the bottom of the stack				
Delivery	Defines the paper output path of Stacker or Basket				
	Manual and the second				
	Manual printing with stacker open				
Hold for Manual	In order to prevent stacker wheel marks on the some photographic papers, you can print your jobs from the				
printing with	printer's front panel with the stacker cover open.				
stacker open	To print your job in Manual mode, click Print in your application, add it to the printer's job queue (where				
	available), and follow the instructions in the front panel.				
	Enables the Print Preview utility to display the layout of a document immediately before a print job begins. Make sure you clic				
Show preview	_ = Endoted and remem addity to display the tayout of a accument infinediately before a print job begins. Make but e you tilt				

Setting	Description
Resizing	Actual size: This will print the document without changing its size. Fit to: This Prints the document on a paper size other than the one for which it is formatted. This option is useful if document is formatted for a paper size which is not available. For example, if a document is formatted for letter-sized paper and you do not have this size of paper, you can print on another size.
	NOTE: Fit to will not be available if Pages per Sheet or Pages per Sheet and Posters is set to more than one.
	% of actual size : Click to enlarge or reduce the document from normal size. Only the image size changes, your document is printed on the paper size selected in your application. Enlarging your document may truncate some of each page.
Quick Sets	The print driver provides many options that can be set to different values when printing a particular job. A quick set stores the values for a print job, so that you can set them all with a single click. Some settings (such as paper size, paper source and orientation) might be overridden by the values provided by your application. To create a customized quick set:
	 Select the quick set that comes closest to satisfying your requirements. Change any value in any of the tabs.
	3. Save the new quick set with a name of your choice. Click the Factory Defaults quick set to restore all options to their default values.
Color options	Choose to print in Grayscale or Black only .
Color Management	Application Managed colors: Allow the software program from which you are printing to manage the color of the document. Printer Managed colors: Allow the printer to manage the type of color produced and select the source profile
Printer Emulation	Select the printer whose colors you want to emulate

Additional support options



Try one of our automated tools or diagnostics



Ask a question on our HP Support Community page



Get in touch with one of our support agents

See solutions Go now Contact us

Country/Region: **United States**

bout Us	Ways to buy	Support	HP Partners	Stay connected
ontact HP	Shop online	Download drivers	HP Partner First program	f in y o
Careers	Call an HP rep	Support & troubleshooting	HP Partner Portal	
nvestor relations	Find a reseller	Community	Developers	
Sustainable impact	Enterprise store	Register your product		
Press center	Public sector purchasing	Authorized service providers		
The Garage		Check repair status		
		Training & certification		
		Fraud alert		
		Security Center		
	Terms & conditions of sales & s	ins Act Site Map Privacy ervice	Use of cookies Personal data	a rights Terms of use