

Lasercutter Thunder Nova 51

See detailed instructions at [Thunder Nova 24 and 51 Laser Cutters](#)

Air pressure

The regulated air pressure should be at **60 psi**. Turn the red knob to adjust the regulated air pressure.

Do not worry about the tank pressure, the compressor runs automatically, and there is an overpressure relief valve.